inphic®

Inphic Electronics(shenzhen)Co.,Ltd.
Address: Room 2301,Block A,Tian'an Cyber Park,
Futian District,Shenzhen
Support phone:+86-755-83476213
Website: http://www.inphic.com

NOTES:

Please note that your player, components and menu items may include illustrations in this manual is slightly different.

inphic ® logo is a trademark.

Listed in this manual the company name, product names and other names are trademarks or registered trademarks.

1080P FULL HD PLAYER

User Manual

Thank you for choosing **inphic®**

Read your User Manual first for quick tips that make using your Inphic product more enjoyable.

Contents

Features highlight..... 02

Package contents..... 03

1.Product overview 03
2.Connections 05
3.Main menu
3.1.Adjust settings 07
3.2.Select device 10
4.Playback Features
4.1.All files 11
4.2.Play movie 12
4.3.Play photo 15
4.4.Play music 14
4.5.Play e-book 16
4.6.Play Swf 16
5.Networks
Networks setting 16
5.1Download 18
5.2.UPNP .... .19
5.3.Weather forecast 19
5.4.Network radio 19
5.5.Download setting..... 19

Troubleshooting 20
Specifications 21

Warning message

Operation tips

Features

● Support Panasonic、SONY AVCHD 1080p HD format, Support 720P HD Video take by major HD-DC in cluding Canon ,SONY,Nikon,Samsung,Fujifilm,Olympus ,Kodak,Pentax, Richon , Casio and so on. You can watch the video on TV using this box ,It is the best tv couple for DC/DV.

● Support H.264, MPEG1/2/4, DIVX, XVID and support major video package inchuding MKV, TS, AVI, M2TS, MTS, Mp4, VOB, DAT, MPG, MOV up to FULL HD 1080P. Support RM/RMVB up to 1280*720p, bitrate up to 40Mbps. Support for SWF format FLASH(i9 only).

● Support time seek playback, five bookmarks playback and resuming playback from the last stopped point;

● Support the Mp3, WMA, OGG,AAC major music files, and specially support FLAC, APE , WAV format.

● Support JPEG, BMP, TIFF, GIF etc . Slideshow can support above 12 modes,support picture playback with background music;

● Full function remote controlled, especially the power supply of external hard disk and main CPU can be shutdown by remote controller;

● Enhanced luminous remote control: Remote control distance over 8 m and point to the range of ± 80 degrees whit sensitive response , used 7# batteries, large and with a luminous buttons, user-friendly to use in the dark. SupportFull function remote control;

● Support YPbPr, AV(CVBS) and HDMI video output(i9/i8H only), suitable for TV or computer display.

● Support for Internet download, users through the Ethernet port or an external USB wireless card connected to the Internet, completely free from the complexity of computer operations, to achieve one key to download, but also downloaded in the background while watching the film side, and at the same time Download 2 films, movies and more waiting.

Package contents

Bracket | Remote control | Power adapter | USB cable | AV cable | Component cable | User manual

Warning In case of missing or incompleteness of the above accessories, please contact your dealer without delay.(Note: Portable HDD is optional)

panel unit

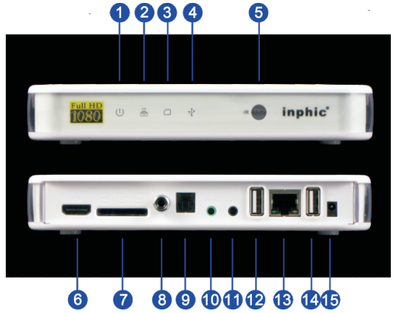

1. Power LED
2. Network LED
3. Card LED
4. USB LED
5. IR Sensor
6. HDMI out (i8H, i9 only)
7. SD/MMC/MS
8. Coaxial out (i8H, i9 only)
9. Spdif out (i8H, i9 only)
10. Component out
11. Composite out
12. 14. USB2.0 port
13. Network IN(i9 only)
15. 5V-DC in

Product Overview

(1) **Power**: To switch standby mode on\off.
(2) **TV mode :**To switch video output mode.
(3) **Mute :** To switch sound on\off.
(4) **Movie :** Hotkey to access the last entry of movie directory.
(5) **Picture :** Hotkey to access the last entry of picture directory.
(6) **Music :** Hotkey to access the last entry of music directory.
(7) **File :** Hotkey to access file menu.
(8) **Mark :** To make five video bookmarks at most or access bookmarks menu.
(9) **Time seek :** Time search play back.
(10/11) ⏮/⏭: Previous chapter(page) / next chapter(page).
(12) **Info :**To display the video file information or current time .
(13) ■ **:** Stop playing or to delete the file in download list.
(14) ◀ / ▶ **:**Left/right /page up/page down or fast backward/forward key **.**
(15) ▲ / ▼ **:** Up/down or to control volume +/-.
(16) **Menu :**To return to main menu.
(17) **Exit :**To return to the previous menu.
(18) **Enter :** Enter/confirm or play/stop.
(19) **Volume +/- :**To change volume of video/music .
(20) A>B: To use as “A-B repeat key” while playing movie or music.
(21) ⏪ / ⏩ **:**Fast backward/forward when playing video/music.
(22) **Copy**: to display the copy/delect menu.
(23) **Audio**: to switch audio channel or to input number/symbol in network use.
(24) **Zoom** : to Zoom in video or picture or to input number/symbol in network use.
(25) ⏯ **:**Play or pause to input number/symbol in network use.
(26) **16:9/4:3 :**To switch video aspect ratio to input number/symbol in network use.

Remote control

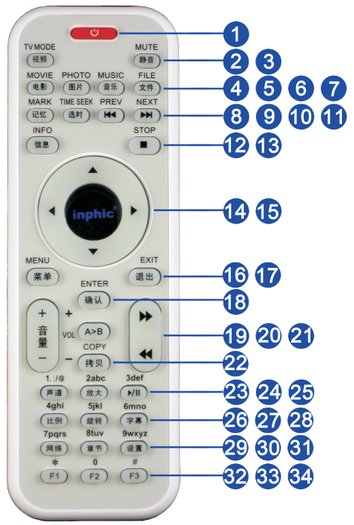

Connection Help

(27) rotation: to rotation 90,180,270 degree or to input number/symbol in network use.
(28) Subtitle :To turn on/off subtitle menu to input number/symbol in network use.
(29) network: hotkey to enter network or to input number/symbol in network use.
(30) title: DVD nevigation or to input number/symbol in network use.
(31) setup: hotkey to enter setup menu orto input number/symbol in network use.
(32) (33) (34) :Reserved or to input number/symbol in network use.

❑ **Notice for remote control:**
Please using the remote control in the effective distance to make sure it operation well.

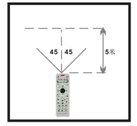

Warning Remove batteries if they are exhausted or if the remote icontrol not to be used for a long time.

2. connection

Important!

☞ if you can see nothing on TV, probably because system video output is mismatch with your connection, please check it refer to the following options.
☞ you only need to make one video connection form the following options, depending on the capabilities of your television.

2.1HDMI (i8H、i9only)

HDMI connections can be destructive communication, recommended to use this connection if your TV has HDMI.

With HDMI cable to connect the unit and TV as shown. Set the TV to HDMI input. Player default output is "720P", normally can see the main menu directly, if there is no image display or not display properly, you can remote control "Video" button to switch the output mode to achieve the highest resolution the TV, get the best visual effects.

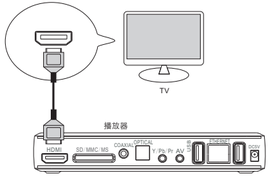

2.2 Y/ Pb / Pr

☞ Y/Pb/Pr video output video only, audio need to A / V cable to provide .

Connection Help

❶ To connect the component cable by color with player and TV .
❷ At the same time to connect red and white cable of the A / V line with player's A / V jack and TV component audio interface.
❸ Switch the TV to component input mode, with player power supply, you can see the output image. if you see the picture color not right, you can remote control "Video"button, switch to the normal display state.

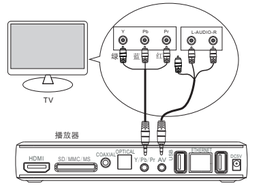

2.3 CVBS

❶ To connect the A/Vcable by color with player and TV.
❷ Switch the TV to A/V input mode. Since player default output mode is "720P", you need to switch the remote control "Video"button to “PAL” or “NTSC”. Then you can see the right picture.

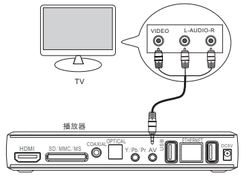

Tips Use the "Video" button to switch the output mode, the three led lights in front of the panel will also flicker to indicate the current mode, such as network light is blinking it means that output mode: "PAL" composite video, see more detail in page 7.

2.4 Coaxial or optical output(i8H、i9 only)

To connect the Coaxial or optical cable with player and TV, and set the digital audio output to “SPDIF RAW” in movie setup menu.

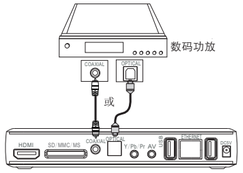

Tips This machine is not equipped with HDMI cable, fiber optic cable, coaxial cable.

Main menu

3. Main menu

When connecting the power adaptor ,player will get into standby mode. you can see one led light on front panel. Power on the player by pressing the **Power** key on remote control, you can see the main menu (You can always go back to the main menu by pressing the **MENU** button) as right picture.

In order to achieve a better viewing experience, Please adjust settings to matching your TV.

3.1 Adjust setting

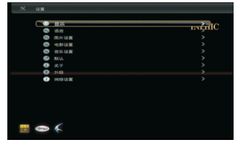

Select "Setting" icon, press **Enter** button to enter setting menu, as right picture.
Press ▲ / ▼ to select each item. Press ◀ / ▶ to select different options.
Press **Enter** to confirm. Press **EXIT** to exit menu.

Setup Options:

Display: Display, Tv mode and Scan mode. you can select the right option according your TV.

PAL／NTSC: for A/V cable to display.
480i/576i/480p/576p/720p/1080i/1080p: for component cable to display.
note: press **Tvmode** key can switch video output mode quickly. And the led light on front panel will flicker at the same time to indicating different output mode, as follows:
NTSC: card led blinking, PAL: network led blinking, 480I/576I: usb led blinking,
480p/576p: usb and network led blinking, 720p: card and network led blinking,
1080I: usb and card led blinking, 1080p: usb, card and network led blinking.

TV MODE: 16:9 , 4:3 to adjust the aspect ratio;
Scan mode: Over Scan(CRT TV was suggested) ,Full Pixel（LCD TV was suggested).

Language : English, **Simplified Chinese**, Traditional Chinese, German, French, Spanish, Italian, Portuguese, Netherlands, Russian, Polish.

Photo setup:

1.view: Thumbnail/List to changing the file view type.
2.Sorting: By file date/By file Name to change the file display order.
3.Directory: Disable/Enable to show file by tree directory or not.
4.Repeat: Repeat directory/Repeat off/Repeat all to select playback repeat mode.
5.cropping: Smart crop/Stretch photo/Entire photo to select display crop mode
6.Slideshow duration: 3s/5s/10s/30s/60s/5m to Select the interval time of Slide Show Timing.
7.Transition effect: on/off to set the transition effect of photos.

Movie setup:

1.view: Thumbnail/List to changing the file view type.
2.Sorting: By file date/By file Name to change the file display order.
3.Directory: Disable/Enable to show file by tree directory or not.
4.Repeat: Repeat directory/Repeat movie/Repeat off/Repeat all to select playback repeat mode.
5.Resume Play: on/off to set resume play or not.
6.Digital Audio Output: SPDIF PCM/SPDIF RAW to select output 2 channels or original bit stream audio output.

Music setup:

1.view: Thumbnail/List to changing the file view type.
2.Sorting: By file date/By file Name to change the file display order.
3.Directory: Disable/Enable to show file by tree directory or not.
4.Repeat: Repeat directory/Repeat song/Repeat off/Repeat all to select playback repeat mode.
5.lyric: Enable/Disable to show lyric when music playing or not.

Text setup:

1.Sorting: By file date/By file Name to change the file display order.
2.Directory: Disable/Enable to show file by tree directory or not.
3.Font Color: Black/White/Blue/Green to select text display color.
4.Background Color: Effect 1/Effect 2/Effect 3 to select text display background color.
5.Auto Browser Speed: Slow/Normal/Fast to select auto browser speed.
5.Resume Play: on/off to set resume play or not.

Default: No/Yes to set factory default or not.
Firmware Info: to show the Media Box Firmware Information.

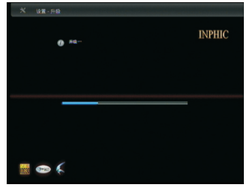

Upgrade: Exit/Install now.

User can download the newest firmware(app_A1.img)from the website of inphic. and copy this file to SD card or U-disk(you must save this file on root directory), then plug the device in media box. Now you can upgrade the software, Enter the upgrade menu->Select Install->Enter to start update software, as right picture: when update completed, the player will restart automatically.(more upgrade detail can see the website: http://bbs.inphic.com)

Warning Note1: **Do not shut down power during upgrade!!!** Otherwise, might cause unrecoverable damage to the player;

Note2: The*.img is for firmware upgrade, so please do not store any similar documents in the storage device.

Network setup: Setting network parameters, more detail see page 16.

3.2 media device

The player with two USB host interface, you can connect U disk, mobile hard disk and other USB interface storage devices. Also with a 3-in-1 card reader, compatible with SD, MMC, MS three types of memory cards.

When insert a storage device, the screen will add an icon correspondingly .

Tips You can use USB HUB to support additional USB device.

4.Playback

4.1.All files

On this menu，users can see all the available files in your device.

On main menu, press ◀ ▶ key to select **All FILE** icon, press **Enter** key to enter video file list page(You can always get in last entry of video file list page by pressing the hotkey **FILE** button).

On this menu:

Press ▲ / ▼ keyto select file.
Press ◀ / ▶ key or ⏮ / ⏭ key to previous / next page.
Press **Enter** key to enter selected folder.
Press **Exit** key to return previous folder.
In non-playing file state， press **Copy** key to show the file management menu.

File edit

✧ copy:

Press **Enter** key to enter copy file menu, Press ▲ / ▼ key to select disk,
Press ◀ ▶ key to enter subdirectory or go back to last level directory,
Press **Enter** key to start copying file after set the target path.
Press **Enter** key to return to all file list page when copy finished.

✧ Delete:

Press ◀ ▶ key to select delete menu, Press **Enter** key to delete menu.
Press ◀ ▶ key to choose "✕ " icon or "✓ " icon,
Press **Enter** key to confirm.

✧ Move:

Press **Enter** key to enter move file menu,
Press ▲ / ▼ key to select disk,
Press ◀ ▶ key to enter subdirectory or go back to last level directory.
Press **Enter** key to start copying file while set the target path, and system will delete the source file automatically.

When operation is done, press **Enter or Exit** key to go back to previous page.

Tips

1.The file edit function can use in all browser page.
2.Incorrect operation might cause the file damage, so It is necessary to backup important file.
3.Sometimes the storage device might be unknown device, please format it.

4.2.**Play movie**

In main menu, press ◀ ▶ key to select **Movie** icon, press **Enter** key to enter video file list page(You can always get in last entry of video file list page by pressing the hotkey **Movie** button). On this page, press ▲ ▼ key to select media device, **Enter** key to enter.

All the available folders and video files will be listed on the left side. Preview window on the right side and the selected video file's profile message will appear together , so users can get the general information of it easily.

On browser file page:

Press ▲ ▼ keyto select file.
Press ◀ ▶ key or ⏮ ⏭ key to previous / next page.
Press **Enter** key to enter selected folder.
Press **Exit** key to return previous folder.
Press ⏯ key(or **Enter** key) to play video file .

In the movie playback state:

Press **vol+/-** key or ▲ ▼ key to adjust proper volume.
Press **mute** key to turn on/off the voice.
Press ⏪ ⏩ key for fast backward or fast forward, options available under the X2, X3 and X4.
Press ◀ ▶ key to drag play time quickly.
Press **Enter** key or ⏯ key to pause and play.
Press ■ key to stop and return to file browser page.
Press ⏮ / ⏭ key to play previous chapter / next chapter in the same directory.
Press **Audio** key switch audio channel if multi-track available.

Playback features

Press **Zoom** key repeatedly, the picture can be zoom in X2, X3 and X4, and in zoom state, press Arrow keys to focus more detail.

Press **16:9/4:3** key to adjust the video screen aspect ratio, you can choose :full-screen, 16:9 mode1, 16:9 mode2, 4:3 mode and keep ratio.

Press **Time seek** key to show time seek menu,press ◂ / ▸ key to select hour/minute/second.Press ▲ / ▼ keyto change current playing time. **Enter** key to confirm. **Exit** key to return. as shown picture1:

Info key to show the current file information, including video type, audio type,file size, and total time , as shown picture2, Press **Info** key again to show total time/current time of current video;

A-B repeat: When Playing video file, press **A>B** button, upper right corner of the screen displays "Repeat A> ", set the starting point for re-broadcast clips, press again **A>B** button to display the "Repeat A>B ", to Set the end of cropping clips. Then the system will automatically loop the contents of AB period. Note that if to repeat long period of time, you can fast-forward to the B point, and then to set the destination. or you can set the end of the firstly, then rewind to set the starting point. press the **Exit** key or press the **A>B** button to return, the screen display "cancel A>B".

Bookmark: Play video file drop out, the system will automatically save the last play time. next time to play this file, system will prompt whether the point of playing from memory. In other menu (non-full-screen playback), press the memory button will display the last 10 films to watch, such as picture 3 shows. press up and down keys to select, you can choose whether from Memory time to start playing, so to achieve a multi-breakpoint play function. If you want to clear the memory list, move the cursor to "Clear all bookmarks" item, **enter** key to confirm.

Tips Restore Default will erase all bookmarks memory point.

Playback features

When play video files, if have subtitles, press the **subtitle** button pop-up sub menu, options are:

- Sub option: to select a subtitle or close subtitle display.
- font color: select the subtitle of the main color, there are 7 options
- Frame color: select the subtitle border color, 7 choices
- size: adjust the subtitle text size
- Location: adjust the position of subtitles
- Encoding: adjust the subtitle encoding format
- Time offset: adjust the subtitle time offset.

Support: *. srt, *. smi, *. ssa subtitle formats. To properly display subtitles, subtitle files and video files need to be in the same directory, and the two files with the same name.

Tips If the file encoding format does not support or exceed the maximum rate, the system will pop up display "not support file press the **Exit** key to exit.

4.3.**Play picture**

In the main menu, press◂▸key to select **Picture** icon, press **Enter** key to enter picture file list page(or use the shortcut **Picture** button),the file default view mode is thumbnail. Press the **Enter** key to enter device, as the right picture shown:

On the right side displays the picture files can be identified, the left window shows the folder or file's information. in this page:

Press ▲ ▼ ◂ ▸ key to select file, Press⏮/⏭key to scroll up / next page.

Press **Exit** to return to previous directory, press the **Enter** key to enter the next level directory, or pictures full screen playback.

In the picture full screen mode:

press⏮⏭key to player the next or the next picture, press ⏯ keycontinuous playback pause, press again to cancel pause. press **exit** or ■ key to stop the current playback, return to the preview page. **Zoom** key to amplify X2, X4, X8, X16 the image. **Rotate** key to rotate 90/180/270 degree the picture;

Playback features

This players supports picture background music selections feature, as follows: full screen picture, press the **Audio** button, pop-up menu selections, as shown,

Press the arrow keys to select the target directory. **enter** key to confirm, **exit** key or ◂ key to return to the parent directory. Press down button to select the music file, press the **Enter** button to start playing background music.

When play background music:

Press ◂◂ ▸▸ button, to select the next track in the directory. Press **+** /**-** button, adjust the background music volume, press **mute** button to close the background music sounds, Press the **Audio** button, close the background music;

4.4.**Music play**

In the main menu, press ◂ ▸ key to select **Music** icon, press **Enter** key to enter music file list page(or use the shortcut **Music** button). Press the **Enter** key to enter device, as the right picture shown:

On the right side displays the picture files can be identified, the left window shows the folder or file's information. in this page:

Press ▲ ▼ key to select file. Press ⏮/⏭ key to scroll up / next page.

Press **Exit** to return to previous directory, press **Enter** key to enter the next level directory, or play the music file.

press ⏯ or **Enter** key to play the music file, as picture 3. in this page:

press ■ key to stop the current playback.

press +/- key to Adjust the appropriate volume. the Mute button to turn on orturn off the sound.

press ◂◂ ▸▸ key to Fast forward, rewind, choose the speed of 2 times, 4 times, 8 times.

When the music file playing, press the **Exit** key would not stop the music playing, unless press the **stop** button or play the movie or flash file.

Tips This device supports LRC lyrics synchronized display, to correctly display lyrics, LRC lyrics file must be the same name with audio files, and in the same directory.

Network

4.5.**E-book**

In main menu, press ◂ ▸ key to select **Text** icon, press **Enter** key to enter device.

Select *.txt file, **Enter** key to full screen playback:

Press ◂ ▸ or ⏮ ⏭ key to page down. ▲ ▼ key to wrap, ◂◂ ▸▸ key to zoom display.

Bookmark: When playing a text file drop out, system will automatically save the last play time. When next time to play the file, system will prompt whether return the point or not. system can save 10 bookmarks.

4.6.FLASH(i9 only)

In main menu, press ◂ ▸ key to select **Flash** icon, press **Enter** key to enter device.

Select *.swf file, **Enter** key to full screen playback:

All operations is the same as movie playback menu, see 4.2 play movie.

5.Network(i9 only)

Before using the network function, connect and configure your network, in the main menu, press **Info** key to display the information of the network status and network authorization.

Quick Installation Network

✪ Wired network connection-i9 connect Internet by router:

Use the twisted-pair cable to connect machine's ETHERNET interface with the router, as right picture:

Configure the network environment: Enter Settings menu, select "Network setup"-> "Current Net Property" to check connection information. If the DHCP function of router is open, Ethernet property will show: Network cable inserted, and IP Address, Gateway, DNS will show the right numbers. if the router's DHCP function off, the machine can't obtain IP addresses. In this case need to manually set the IP address: for example, select "Set Ethernet network manually" to set the IP address: 192.168.1.200, subnet mask is set to: 255.255.255.0, gateway is set to: 192.168.1.1. After setting, press the Enter key, then return to view the network connection status.

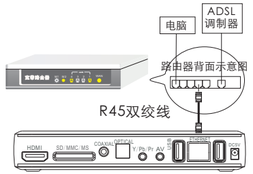

Network

✪ Wired network connection - i9 connect ADSL PPPoE modem

Use the twisted-pair cable to connect machine's ETHERNET interface with the ADSL modem, as right picture:

Configure the network environment steps: select "PPPoE Dial", enter the ADSL Account and password, select connect to internet, dial-up success Shows the network after a successful connection.

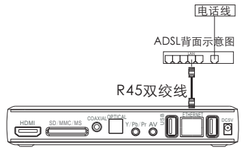

✪ Wireless network connection - This function need to purchase USB wireless card (select models optional).

Use wireless card plugged into the USB port, enter settings menu->network settings -> Set WIFI Auto -> select the access points, such as: "inphic" - press the Enter key to connect. If you select the AP to set a communication password, press the Enter key will pop up the password input box, by ▲ ▼ ◀ ▶ keys to select the screen keyboard, "Submit" button to determine the password, the password correctly will be validated and get IP addresses. Wireless settings can be manually set, enter setting-Wifi-Manual menu, input wireless network name, encryption, IP address (dynamic IP / static IP), password (if the AP to set a password, or skip), select "Connect" , press the Enter key to connect the AP, set the correct words will pop up and IP address information is verified.

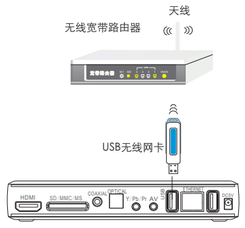

Warning

1, non-specific wireless network card may not be used because the built-in driver can only drive the specified type of wireless card.

2, do not use both wired and wireless networks, using both IP addresses will lead to internal conflict.

3, the network configuration details consult the router manual.

4, if a network connection, the network icon will be lit in the upper right corner of the main menu.

Network

5.1. Network download

In main menu, press ◀ ▶ key to select **Network** icon, then select **Net download** icon, **Enter** key to enter download menu, as right picture1:

5.1.1 **Download settings**:

The first using download function need to set download options, select "Settings " icon, press the Enter key to enter, you can see the following options, as right picture2:

❒ Download path: Choose a device for download file storage, left and right keys to select and press OK key. The system will automatically create a selected drive storage directory: \ net_movie.

❒ Download speed: Download speed limit option : no limited / 30KB/60KB/100KB.

❒ Network setup: The same as Network setup menu.

5.1.2 **Downloaded:**

In this menu you will see all the movies in default download directory.

5.1.3 **Ranking list:**

The ranking list has 15 categories according to the different needs. Enter the classification menu will see the video list and video's introduction. press **Enter** button to the download page, you can see video resource, contains all the relevant information (name, definition, format, size), such as the right one:

Press ▲ ▼ keys to select files, press **Enter** key to pop up the download dialog box , select "Yes" to add the task into the download list. Press the **Stop** button to delete the task, press **Exit** key to exit. Task will auto download in background.

5.1.4 **Pop search:**

Enter pop search menu, you will see the search input field, key tips. use of the remote control number keys to input file name to search the resource (the keys on the remote four rows below), press the Enter key to search.

press "#" key to switch input method, press "*" key to delete. Search results include the film out of the name, definition, format and size. Up and down keys to select, press the Enter key to start download, when finish it, you can see the file in the "Downloaded" menu.

1. The search results ranking is based on the file definition, mechanisms such as the top download speed of the principle ,so Recommended to choose the top link to download.
2. Try to input file full name when search a video, then the search result closer to what you need and the search time will be shortened.

5.1.5 **Torrent:**

Please put the BT seed file to storage devices, and enter this menu to select the file to download.

5.1.6 **manage:**

In this menu you can see all the movie are downloaded and ready to download . System supports two movies while downloading, if you download more than two films will be postponed to download. Press **Enter** key to switch the download or pause, press the **Copy** button to delete the download tasks.

5.2 UPNP

In main menu, press ◂ ▸ key to select **Network** icon, then select **UPNP** icon **Enter** key to enter this menu. This feature requires UPNP server installed on your computer, more detail see Forum http://bbs.inphic.cn Firmware Download Center: i9UPNP Help.

5.3 Weather

In main menu, press ◂ ▸ key to select **Network** icon, then select **Weather** icon **Enter** key to enter. In the left side shows the default city 3 days weather forecast. ▴ ▾ key to select the province you want, **Enter** key to view the weather, press **Copy** button to set the city to default.

In the main menu, press the F1 key on the remote control will display the default city forecast.

5.4 Net radio

In main menu, press ◂ ▸ key to select **Network** icon, then select **Net radio** icon **Enter** key to enter.

Menu will display all the list of radio stations directly, if you have not saved favorite radio stations. press ▴ ▾ key to select, **Enter** key to play, Exit key to return, A>B key to search. press the **Copy** button to add this station to your favorites.

Menu will show Favorites menu directly, if you have saved favorite radio stations. Press ◂ ▸ key to select function.

★ Display the list of programs Favorites. press ▴ ▾ key to select, **Enter** key to play, Exit key to return.

Back to list of all stations.

Remove the radio in favorites list, press ▴ ▾ key to select, **Enter** key to delete.

Search for online radio stations.

Troubleshooting

Tips If you encounter problems when using this unit, check the following points before requesting service.

No power

– Make sure the AC outlet has power.
-- Turn on the power by power key on remote control.

No picture or The pictureis distorted

– Make sure the video calbe or HDMI cable connect correctly.

– Make sure the video output mode is match with TV.
Using the **TV mode** button on the remote control to switch.
A/V: PAL/NTSC;
Y/Pb/Pr: 1080P/1080I/720P/576P/576I/480P/480I;
HDMI: 1080P/1080I/720P/576P/576I/480P/480I。

No sound

– Check the audio connection.
-- If system is on component output mode , you need to connect the additional audio cable.

Remote control does not work

– Check the polarities of the batteries are as indicated on the remote control.
--Batteries are weak, replace the batteries.

Slow operation

--A simple file folder system will greatly accelerate the response speed of the system.
--The file numbers would be better less 300 in one folder.

File name shows abnormal

– Try to use English and Chinese character for the folder name, and the characters no more than 10.

Icon shows abnormal

– If any fault occurs due to misoperation, please press power button of remote control to re-initialize the unit.

Tips

Note: Due to continuous perfection and upgrade of the system, the actual display
and operations may different from the manual, It is normal and will not affect your
normal operation and enjoyments.

Specifications

Video format

H.264
Bitrate up to 50Mbps,
Resolution up to 1920×1080 pixel,
Format: mkv、ts、m2ts、mts、 avi、mov、mp4
RealVideo 8/9/10:
Bitrate up to 40Mbps,
Resolution up to1280×720 pixel,
Format: rm、rmvb;
MPEG-4:
Bitrate up to 50Mbps,
Resolution up to 1920×1080 pixel,
Format:avi(divX3-6)、xvid、mp4、 mov、mkv;
MPEG-2 (DVD) :
Bitrate up to 80Mbps,
Resolution up to 1920×1080 pixel,
Format:vob、mpeg、mpg;
MPEG-1 (VCD) :
Bitrate up to 80Mbps,
Resolution up to 1920×1080 pixel
Format:dat、mpg、mpeg;

Audio format

Mp3 (8~320Kbps) 、WMA、WAV、OGG、AAC、FLAC、APE;Real Audio

Picture format

JPG、BMP、TIFF、PNG、GIF;

Resolution

480i、576i、480p、576p、720p、1080i、 1080p;

File system

FAT/FAT32, NTFS;

Output

CVBS, YPbPr
HDMI(i8、 i9)

Input

USB: 480Mbps USB2.0 HOST
Card reader: SD\MMC\MS

Temperature

Ambient temperature:
+5~+50degree,
Humidity <90% ;
Storage temperature:
-20~+70degree,
Humidity <95% ;

Dimensions

178×116×28MM
Weight about 200 g

Power consumption

Input: 100~240V, 50/60Hz,
Output: DC 5V/2A,
working < 10 w,
Standby < 50 mw;

Tips Note: Specification and design are subject to change without notice.